
ClimaRad®

Operating Instructions ClimaRad S-Fan+ (with Heating Element) Incl. Room Thermostat

Operation of the ClimaRad S-Fan+

The ClimaRad S-Fan+ achieves optimal air quality through ventilation combined with heating. This unit can be used in two different ways: Ventilate Only, and Heat and Ventilate.

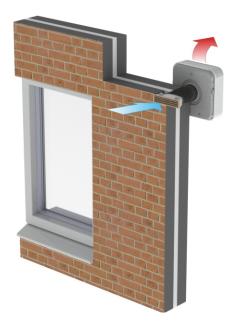



 Λ Please note! The air supply opening must always remain open and unimpeded!

Operation ClimaRad S-Fan+

The ClimaRad S-Fan+ can be operated via the control panel on the bottom of the unit in combination with the paired room thermostat.





Control panel

Room thermostat

Function keys ventilate				
AUTO	<u>Automatic control.</u> Room ventilation is automatically controlled by your ClimaRad S- Fan+, which ventilates based on CO measurement and RV. Press 2 to switch off the heating function.			
$\bigoplus \bigcirc$	<u>Manual: manual ventilation with outside air:</u> You can set your desired ventilation speed using the + and - buttons on your control panel. After a period of 4 hours, the ClimaRad S-Fan+ switches back to automatic control. Use this function in summer, for example, when you want to lower the temperature in your heated room by a few degrees at night (summer night ventilation).			
	<u>Comfort mode.</u> The ClimaRad S-Fan+ preheats the outside air to 12°C for a period of 8 hours.			
	Air quality. Increase or decrease the desired air quality.			
Function keys heating and ventilation				
	<u>Heating.</u> The S-Fan+ will heat the room to the temperature set on the room the room the room is ventilated based on CO.			
Image: Second system	thermostat. The room is ventilated based on CO. <u>Heating rate.</u> Increase or decrease fan speed to heat faster or slower.			
Image: Second secon	thermostat. The room is ventilated based on CO. <u>Heating rate.</u> Increase or decrease fan speed to heat faster or slower.			
 Image: Second second	thermostat. The room is ventilated based on CO. Heating rate. Increase or decrease fan speed to heat faster or slower. al Pause/Off. Use this function if you (temporarily) do not want to ventilate. After a period of 4 hours, the ClimaRad S-Fan+ switches back to the automatic setting. When the button is pressed for 5 seconds, the unit switches off. In case of emergencies you			

٨	Nessages		Switch off
		<u>Child lock.</u> The child lock is switched on. Press and hold the three buttons for 4 seconds to switch it off.	Press 4 seconds simultaneously
	×	<u>Malfunction.</u> A malfunction has occurred. Contact your technician or housing corporation.	
(filter	<u>Dirty filter.</u> Replace the air filter or contact your technician or housing corporation. After replacement, press and hold the + and - buttons for 6 seconds.	Press for 6 seconds
	Ś	<u>Pairing.</u> The ClimaRad S-Fan+ can be linked to other ClimaRad products. Press the buttons briefly and simultaneously.	Press briefly and simultaneously