

# User Instructions ClimaRad Fan


## What is the purpose of a ClimaRad Fan?

ClimaRad Fans are often installed in bathrooms, kitchens or toilets and are intended to extract polluted air. This could be, for example, humid air, cooking vapours or unpleasant smells.



*ClimaRad Fan*

Bedrooms and 'wet rooms' (bathroom, kitchen, toilet) are vented through window vents for the supply of fresh air and a fan for the extraction of polluted air. A flow of air through the various bedrooms is achieved via doors (an open door or under the door). To achieve a good ventilation the window vents should be open when you are in the room.

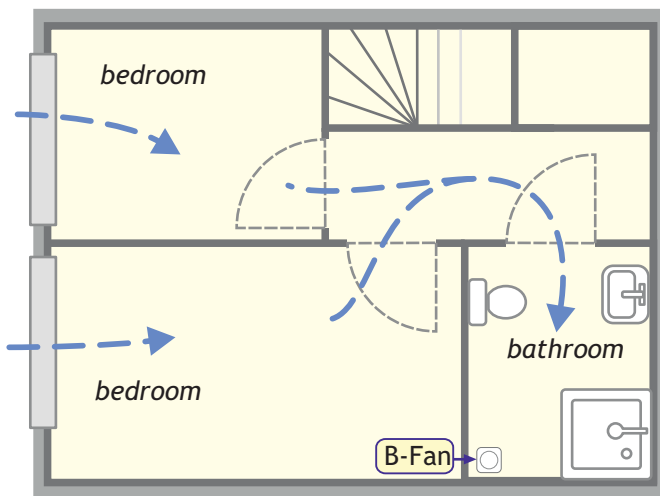

*Example*

Depending on the type of fan (bathroom, kitchen, toilet) the ventilation is automatically switched on, for example, when you enter the room, due to humidity in the air or if the air quality is insufficient.

The bedroom floor is ventilated in the evening and at night.

- If you have a ClimaRad 2.0 in the living room, the fan is wirelessly linked to the ClimaRad 2.0. The fan will then be automatically activated between 8 pm and 8 am.
- If you do not have a ClimaRad 2.0 in the living room, the ClimaRad Fan is operated by the CO<sub>2</sub> sensor or the 4-position switch.

The CO<sub>2</sub> sensor operates automatically. The 4-position switch can be operated by you.

## Operation of ClimaRad Fan:

### Automatic:

via the external CO<sub>2</sub>-sensor (optional) (standard setting; 1.000 ppm)



*CO<sub>2</sub>-sensor*

### Manual:

via the 4-position switch (optional)

Position I: Low  
Position II: Medium  
Position III: High  
Auto: Automatic



*4-position switch*