

Maintenance Instructions ClimaRad Sensa H2X

Maintenance frequency for filters

When should you replace the filters?


- With normal use, every 2 years or earlier if the message 'Filter vervuild' appears on the display (for example in homes and offices).
- In the case of intensive use, after 1 year or earlier if the message 'Filter vervuild' appears on the display (e.g. for care homes and schools).

Ordering filters


Order new filters at

www.climarad.nl/filters


Replacing air supply filters

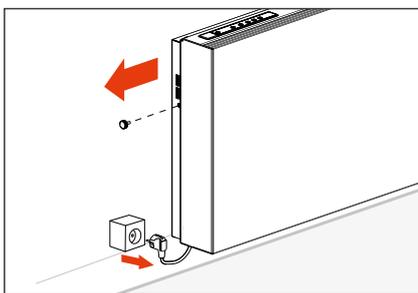


1. First, turn off the device by unplugging it from the power outlet. Then (if any) remove the locking screws on both sides of the wall frame.

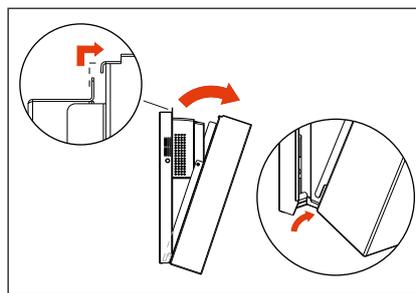


2. Remove the casing by lifting it slightly, then tilting it forward and lifting it out of the wall frame. Pay attention to the cabling of the control panel.

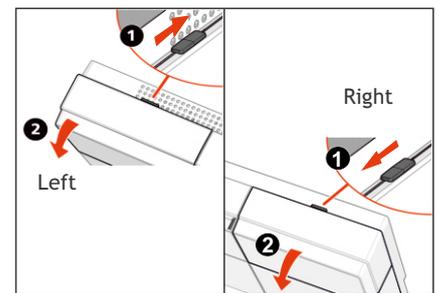


3. Push the left and right locking slide on top of the ClimaRad ventilation unit inwards and open both flaps by pulling them towards you.

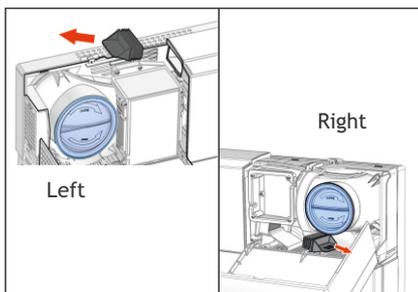


4. Remove the black filter caps left and right.

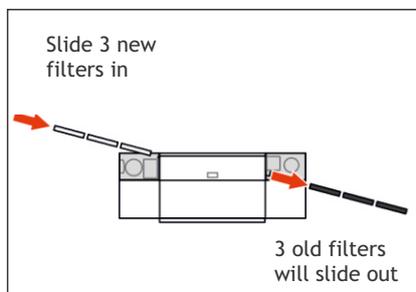


5. On the left side, slide three new filter parts into the device. On the right side, the old filter parts come out automatically.

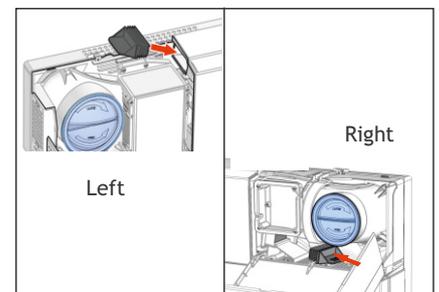


6. Replace the two black filter caps (left and right).

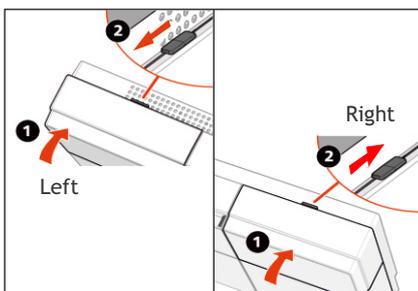

7. Close the flaps on the left and right side of the device and slide both locking sliders back.

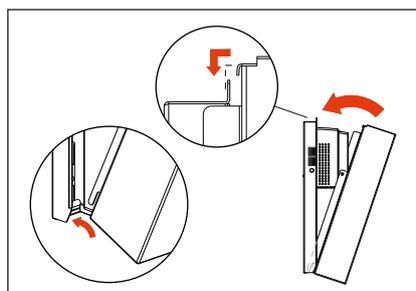


8. Place the housing by putting it in the wall frame and tilting it forward. Now lift the housing slightly so that it falls over the wall frame. Make sure that the cabling is not jammed anywhere. *If applicable, replace the locking screws.*

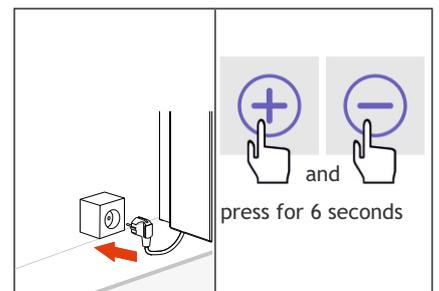

9. Plug it back in and reset the filter hour counter (press + and - simultaneously for 6 seconds). The message "filter contaminated" now disappears. **Important: Reset the filter hour counter only if you have replaced the filters.**


Cleaning exhaust air filters

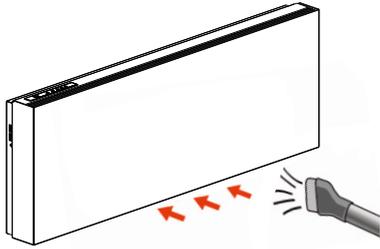


The exhaust air filters are located at the bottom of the device.

Hoover the filters in case of visible contamination. This way, the air flow is guaranteed. You do not have to remove the exhaust air filters.


Replacing exhaust air filters

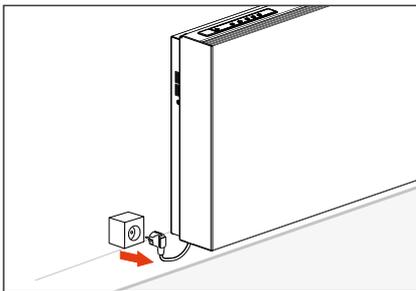

1. First, turn off the device by unplugging it from the power outlet.

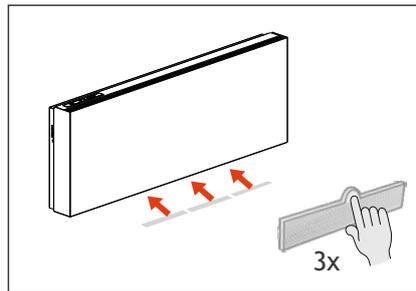


2. The 3 exhaust filters are located at the bottom of the device, in the middle. These can be removed by placing a finger behind the notch.

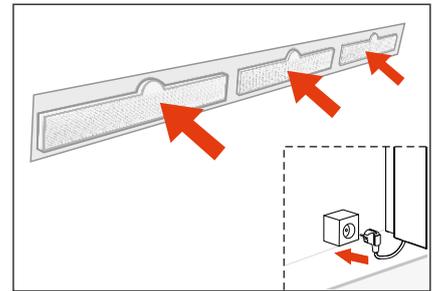


3. Push 3 new exhaust filters into the holders and then plug the plug back in.


Luftkanäle reinigen

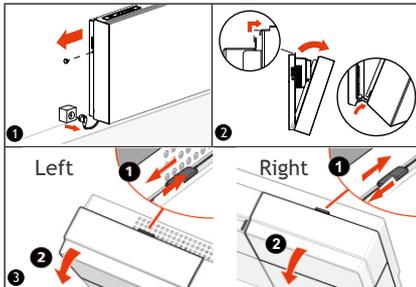


4. First, follow steps 1 through 3 of "replacing air supply filters".

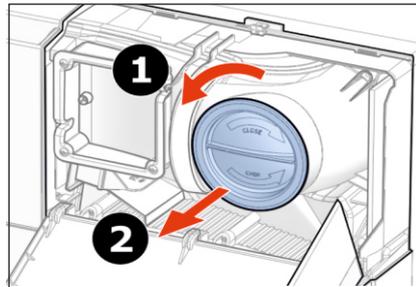


5. Turn both blue caps once anti-clockwise and remove them.

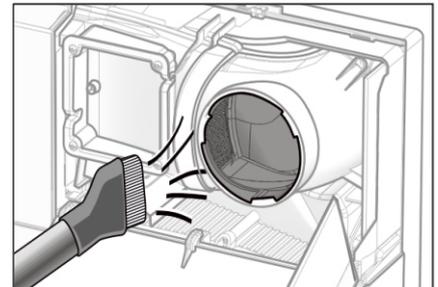


6. Remove dirt from both ducts with a hoover or a soft cloth (do not use water).

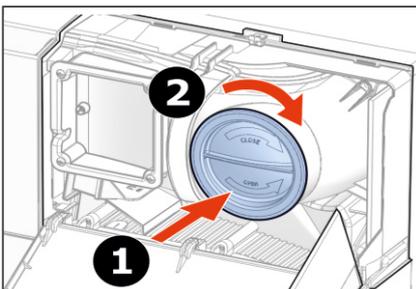

7. Push the two blue filter caps back in completely for correct operation and tighten them.

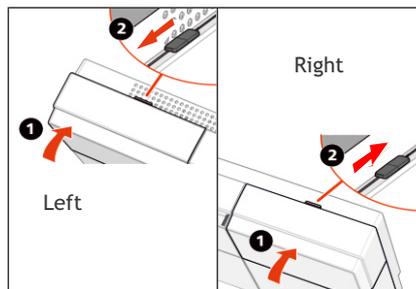

8. Close the flaps on the left and right sides of the device and slide both lock sliders back.

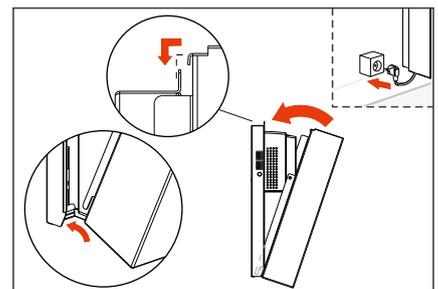

9. Place the housing by putting it in the wall frame and tilting it forward. Now lift the housing slightly so that it falls over the wall frame. Make sure that the cabling is not jammed anywhere. Plug it in. *Replace, if applicable, the locking screws.*